


Building Emergency Tube

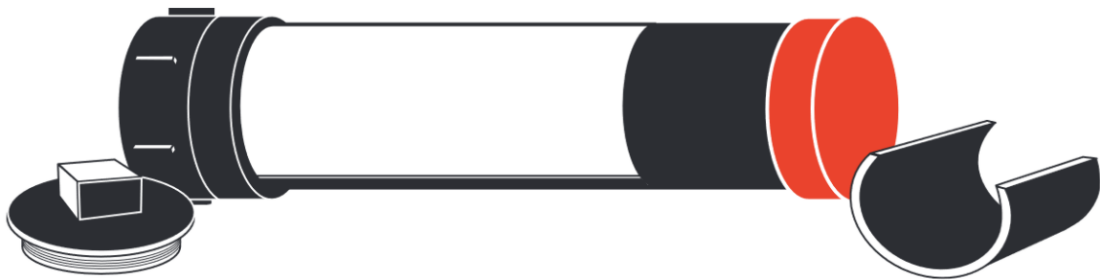

The pictured waterproof tube:

- Constructed of 2" ABS DWV Pipe approximately 14" long
 - 2" ABS DWV cap slip on one end (glued on with ABS glue)
 - 2" ABS DWV Adaptor FIP (glued on the other end) and threaded plug insert
 - 3" length of 2½ ABS pipe partially cut to be used as mounting bracket
 - Drill 2 holes for mounting screws
- Made visible with reflective marking or letters (suggestion: orange stripes)
- Materials should be available at most hardware or building supply stores
- Install on utility pole (if available) in yard